

Premium Caller ID Telephone System



User Manual

XTS-752B [Black Color]



Product of
xLabGlobal.com
in Texas, USA
MADE IN CHINA



support.xLabGlobal.com
Customer Support



warranty.xLabGlobal.com
Warranty Registration



Namaste!

Thank you for purchasing our newest Specially Designed Caller ID Phone System with Super Clarity Voice Listening and Talking.

This user's manual is designed to familiarize you with your new phone. Please read it carefully before operating the phone, and follow these basic safety precautions while using it to reduce the damage to the phone and avoid the risk of fire, electric shock and injury to persons.

Note: Due to continuous Product development, all features and specifications are subject to change without prior notice.

Important Safety Precautions

Thank you for purchasing our newest Caller ID phone with voice talking. This user's manual is designed to familiarize you with your new phone. Please read it carefully before operating the phone, and follow these basic safety precautions during using to reduce the damage to the phone and avoid the risk of fire, electric shock and injury to persons:

1. The phone should be placed in cool, dry, ventilated and non-toxic places, etc.
2. Keep your phone away from moisture, dust, liquids and steam; if it gets wet or dusty, wipe it immediately.
3. Use damp soft cloth for cleaning occasionally to keep it looking new; don't use liquid cleaners or aerosol cleaners. Also make sure to disconnect the telephone line before cleaning.
4. Do not expose LCD in the sun for long time; and if you won't use the phone for more than a month, remove the batteries because they may leak and damage the phone.
5. Never
 - Touch plug contacts with sharp or metallic objects.
 - Move and operate the phone during an electrical storm, there may be a remote risk of electronic shock from lightning and thunder.
 - Open the phone yourself, modifying or tampering the internal components can cause malfunction and might invalidate the warranty. If your phone is not performing as it should, take it to your local service centre for repair.
6. Other Important Tips
 - Caller ID function will work only after you have subscribed for the service in the local telecom company.
 - Please answer the call after the phone rings twice, otherwise there are chances that Caller ID may not come in your phone.

FREQUENTLY ASKED QUESTIONS

1. NO TONE

Please check all the lines connections, and ensure all the connections are proper.

2. CAN NOT MAKE/DIAL A CALL

Please check the lock position and ensure Keys are unlocked.

3. NOISE

Please check if the line cord or wall plug is moistured.

4. ONLY GIVING ONE RING WHILE STILL CAN MAKE A CALL

Please check the line connection, check if too many phones are connected in the same line, or the wall socket or Tel Line cord is moistured.

5. CANNOT DISPLAY CALLER ID

- a. Be sure that you have applied this service from a Telecom service provider
- b. Check if the battery has not drained and it has power.
- c. Check if an apparatus is connected between unit and Telephone line. (Example micro filters used in an ADSL line)

If the unit still does not work properly, disconnect all the telephone cords, remove the Batteries and after 5 minutes reload batteries by inserting the telephone line. The unit will get a reset. Start using the unit.

Answering Calls

1. When the unit rings, lift handset or press Hands free (icon)-button to answer.
2. When you finished talking, hang up the handset or press Hands free (icon)-button again

Caller Id Service

If you subscribe to a caller id service, the party's information will be display after the ring

Using the Caller list

DELETE -Press **"DEL"** to delete the selected number when reviewing the incoming or outgoing calls. Press and hold this key for 3 seconds to delete all the incoming or outgoing calls. When dialing a number, press **"DEL"** to delete the last digit.

HOLD- This button allows you to interrupt a conversation without hanging up. When it happens important or private circumstances occurs on your side and you don't want the other end to hear through the telephone. You can press this button and the other end will hear a melody. After you finish the conversation with the third party, press this button again to continue your phone call.

VOL- On hook-on state, this button is used to adjust the Ringer volume from 1-4 level by pressing this key continually. On hook-off state, it is used to adjust the Hands-free volume.

REDIAL –

1. On standby state, press H-F button, and press "Redial" button to redial the last dialed number;

2. On hook-off state, press "Redial" button to redial the last dialed number.

Back- This button is used to call back the incoming back, select the incoming back number and press this key to call back.

Flash- The Flash button allows you to access special telephone company features such as call waiting and three way calling. You can also press the FLASH button to get dial tone to make a new call without hanging up the handset.

Hands free button

This button is to help you to dial a call without picking up the handset. To listen the call, please pick up the handset.

Preparation and Installation Instructions

1. Open the battery compartment cover and insert 3 batteries of "AA" size into the compartment with correct polarity, then close the cover. After that there will be some icons like date and time shown on LCD, otherwise you need reinstall the batteries properly.
Important notes: - Please disconnect the phone from telephone line when installing or replacing batteries; and dispose of used old batteries properly, do not bury or burn them.
2. Connect the phone base and handset using the supplied coiled cord.
3. Plug one end of supplied line cord into the modular line jack of the phone base and other end to the available output jack provided by local telecom office. Lift up the handset or press Hands-free key to make sure a dialing tone, otherwise check the connection.
4. Definitions
 - On-hook state: The phone is in idle state with hands-free speaker deactivated and handset placed well on the phone base cradle.
 - Off-hook: The phone engages the telephone line by activating the hands-free speaker or lifting up the handset.

Features

- FSK & DTMF dual caller ID system
- Wall mountable
- 8-Digits 50-groups Incoming call memories
- 8-Digits 16-groups Outgoing Call Memories
- Wall mountable
- Hold on music
- 16 types of ringing tones for selection
- 5 level LCD brightness adjustable
- 3 groups of alarm with different alarm ringer
- Last number redial
- Auto redial function
- Hands free volume adjustable
- 10 one-touch memories
- Flash time selectable between 90/95/100/120/180/300/600/1000ms

Operation Guide

1. Basic Setting Menu

a.) Setting the Date

1. Press **Flash/Set** , LCD Display "**SE 12345678**"
2. Press **1** , LCD Display "1-date 2-CLI"
3. Press **1** to set the date, LCD display " d 2012 01-01" and Flash ,Press number key to input the Date
For example if Date is November 08, 2014, Press " 141108"
4. Press **Flash/Set** to confirm, press Handsfree(icon) button phone to exit.

b.) Setting the Time

1. Press **FLASH/SET** ,LCD Display "**SE 12345678**"
2. Press **1** for LCD Display " **1-date 2-CLI**"
3. Press **2** to select Clock setting, LCD display "**CL 00-00**" and Flash, Press number key to input the Time.
For example if Time is 13.45, Press "**13.45**"
4. Press **FLASH/SET** to confirm ,then press DEL to return to last menu, or press Hands free(icon) button phone to exit

c.) Setting the VIP Ringer Sound

1. Press **FLASH/SET**, LCD Display "**SE 12345678**"
2. Press **2** ,LCD Display "**r 1T2VIP3VOL**"
3. Press **2** to select setting of VIP Ringer Sound ,LCD display "**ring Type01**",then press **UP/DOWN** to select VIP Ringer Sound
4. Press **FLASH/SET** to confirm ,then press Handsfree(icon) button phone to exit

d.) Setting The Ringer Volume

1. Press **FLASH/SET**,LCD Display "**SE 12345678**"
2. Press **2** , LCD Display "**r 1T2VIP3VOL**"
3. Press **3** to select setting of Ringer Sound ,LCD display "**ring VOL01**",then press **UP/DOWN** to select Ringer Sound."VOL 1 is the lowest sound" , "VOL 4 is the highest sound"
4. Press **FLASH/SET** to confirm ,then press Handsfree(icon) button phone to exit

Setting Prefix Code

1. Press **FLASH/SET**,LCD Display "**SE 12345678**"
2. Press **6** , LCD Display "**1-LOC 2-OC**"
3. Press **2** to select setting to Prefix Code ,LCD display "**Out OFF**", Press UP or Down, LCD display "Out -----", Then Press number Key to input max .8 digits Prefix Code.
4. Press **FLASH/SET** to confirm ,then press Hands free(icon) button-Phone to exit

Setting LCD Contrast

1. Press **FLASH/SET**,LCD Display "**SE 12345678**"
Press **7** , LCD Display "**LCD con 4**"
2. Press **UP/DOWN** to select LCD contrast
3. Press **FLASH/SET** to confirm ,then press Hands free(icon) button phone to exit

Making Calls

1. Lift the telephone or press the Hands free(icon)-button
2. Dial a phone number ,then dial a number is display : 123456789
3. After a few seconds ,the display will begin to show the time of the call : "**01-22**" ,it mean the time of the call is : 1 minute and 22 seconds
4. To hang up, place the handset on the cradle or press Hands free (icon) button.

TO Redial the last Dialed Number

1. Lift the telephone or press the Hands free(icon)-button
2. Press redial once, the last number will be redialed.
3. When you are dialing and the line is busy ,you can just press **FLASH/SET** once ,then press Redial to Redial the number
4. Press **6** ,LCD Display "1-LOC 2-OL
Press **1** to set local Area Code ,LCD display "Loc-----",Then Press number Key to input max 8 digits Local Area Code
5. Press **FLASH/SET** to confirm, then press Hands free(icon) button-Phone to exit.

TO Auto Redial the last Dialed Number

1. Lift the telephone or press the Hands free(icon)-button
2. If the line is busy, you can just press the Back directly without hanging up the handset or press Hands free (icon)-button.
3. Then this phone will Auto –Redial the number again until the other party is connected.

Setting Flash Time

1. Press **FLASH/SET**,LCD Display "**SE 12345678**"
2. Press **5**,LCD Display "**1-F 2 –PT 3-d**"
3. Press **1** to select setting of Flash Time LCD display "**flash 600**" then press **UP/DOWN** to select Flash time from 90,95,100,120,180,300,600,1000ms
4. Press **FLASH/SET** to confirm ,then press Handsfree(icon) button phone to exit

Setting Tone/Pulse Dialing Mode

1. Press **FLASH/SET**,LCD Display "**SE 12345678**"
2. Press **5** ,LCD Display "**1-F 2 –PT 3-d**"
3. Press **2** to select setting of Tone /Pulse dialing mode .LCD display "**P T Tone**" then
4. press **UP/DOWN** to select "**Tone**" (Tone Dialing) or" Pulse "(Pulse Dialing)
5. Press **FLASH/SET** to confirm ,then press Handsfree(icon) button -Phone to exit

Setting Defence of Un-authorized use

1. Press **FLASH/SET**,LCD Display "**SE 12345678**"
2. Press **5** ,LCD Display "**1-F 2 –PT 3-d**"
3. Press **3** to select setting of defense of un –authorized use. LCD display "defend Off" then press up or down to select "**defend Off** " or" defend On"
4. Press **FLASH/SET** to confirm ,then press Handsfree(icon) button to exit
5. Note: If you set "**defend on**" when there is other telephone connected to same telephone line ,this phone will make disturbing sound to limit the use of other telephone but if you want to connect one or more telephone in the same line set at "**defend OFF**"

Setting Local Area Code

1. Press **FLASH/SET**,LCD Display "**SE 12345678**"
2. Press **6** ,LCD Display "**1-LOC 2-OL**"
3. Press **1** to set local Area Code ,LCD display "**Loc-----**",Then Press number Key to input max 8 digits Local Area Code
4. Press **FLASH/SET** to confirm, then press Hands free(icon) button-Phone to exit.


Setting the Alarm Clock

1. Press **FLASH/SET**, LCD Display "**SE 12345678**"
2. Press **3** ,LCD Display "**AL 1-2-3**"
3. Press **1** to select setting of NO.1 Alarm Clock ,LCD Display "**ALARM OFF**" then press up once ,LCD will Display "**ALAR 00-00**"; Press Number key To Set Alarm Clock Time .For example to set alarm clock at 8.30 A.M press "**08.30**" Press **FLASH/SET** to confirm ,then press Handsfree(icon) button phone to exit
4. Note as above step Set NO 2 or 3 Alarm Clock .No 1 will sound once and No 2 and No 3 Alarm Clock will make alarm sound Daily .Press any button to stop
5. Alarm Clock or as above step ,set up the alarm clock at "Alarm Off" mode to cancel the Alarm Clock Setting

Setting No–Disturbing time

1. Press **FLASH/SET**, LCD Display "**SE 12345678**"
2. Press **4** ,LCD Display "**OFF_r 00-00**"
3. Press number key to set up NO-disturbing time ,for example ,to set 2 hours and 30 minutes no disturbing time press "**0230**"
4. Press **FLASH/SET** to confirm ,then press Handsfree(icon) button phone to exit
5. Note: This phone will display "**02.30**" and then start to count on the No –disturbing time. Within the present NO-Disturbing Time. This phone will not make ring sound expect the VIP Calls, but this phone will still display and store Caller ID number.

Illustration of Functions

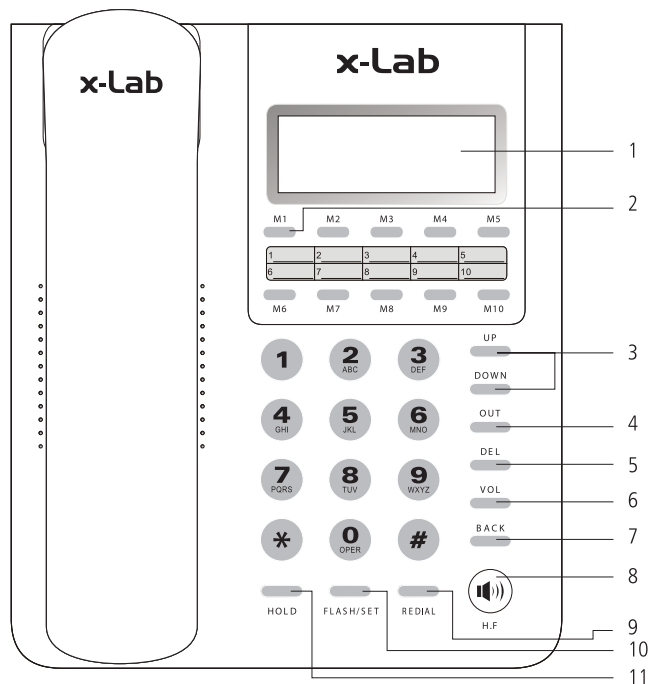

- | | | | |
|----|------------------|---|--|
| 1 | LCD | : | LCD Display Screen |
| 2 | M1-M10 | : | (M1- M10) One touch memory button |
| 3 | UP/ DOWN | : | Review Incoming Calls
Navigation Keys During Settings |
| 4 | OUT | : | Review Outgoing calls |
| 5 | DEL | : | Deletes Digits & numbers |
| 6 | VOL | : | Adjust Hands Free volume |
| 7 | BACK | : | Back Pre-dial numbers |
| 8 | H.F. | : | Activate/Deactivate Hands Free Speaker |
| 9 | REDIAL | : | Redial the last dialled number |
| 10 | FLASH/SET | : | Flash, Pass to another extension/ Set, access the setting menu |
| 11 | HOLD | : | Hold Button |